

Deck Wheel Kit

For 38 Inch and 42 Inch Decks on
600 Series Box Frame Tractors

Model OEM-190-183

SECTION 1: CALLING CUSTOMER SUPPORT

If you have difficulty assembling this product or have any questions regarding the controls, operation or maintenance of this unit, please call the Customer Support Department.



Call 1- (330) 220-4MTD (4683) or 1- (800)-800-7310 to reach a Customer Support representative. Please have your unit's model number and serial number ready when you call. See your Owner's Manual to locate this information. You will be asked to enter the serial number in order to process your call.

SECTION 2: CONTENTS OF CARTON

Before beginning installation, remove all parts from the carton to make sure everything is present. Carton contents are listed below. Part numbers are shown in parentheses. Quantities are shown in brackets.

- 1 - Wheel Bracket LH - (783-04017) [Qty. 1]
- 2 - Wheel Bracket RH - (783-04016) [Qty. 1]

- 3 - Deck Wheels - (734-0973) [Qty. 2]
- 4 - 3/8-16 Shoulder Screws - (738-0373) [Qty. 2]
- 5 - 3/8-16 Flange Lock Nuts - (712-0431) [Qty. 2]
- 6 - 5/16-18 Flange Lock Nuts - (712-3004A) [Qty. 6]
- 7 - 5/16-18 Hex Head Bolts - (710-3025) [Qty. 6]

SECTION 3: ASSEMBLY

Tools Required for Installation:

- You will need the following tools: 1/2" box wrench; 1/2" open end wrench; 9/16" box wrench; 3/4" box wrench or socket and ratchet drive; a 3/16" pin punch; hammer and two 3 1/2" high x 24" long wood blocks.



WARNING: Before beginning installation, place the tractor on a firm and level surface. Place the PTO in the disengaged (OFF) position, stop the tractor engine and set the parking brake.

NOTE: References to *LEFT* and *RIGHT* indicate the left and right sides of the tractor when facing forward in the operator's position. Reference to the *FRONT* indicates the grille end; to the *REAR* the drawbar end.

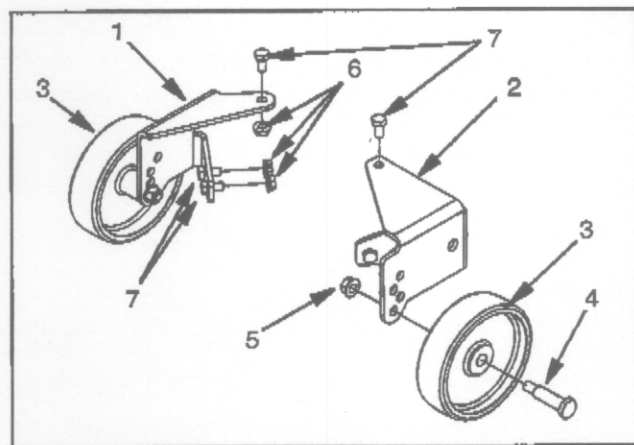


Figure 1

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

PRINTED IN U.S.A.

FORM NO. 769-00401

1/03